is 11.5" x 47".

2

Banner printing must be turned on ("Allow") at the device prior to sending the print job.

Select function to use.

Operating Remotely.

Scan

Sanitize


BEFORE USE

Overating Remotely.

Scan

Operating Remotely.


Operating Rem

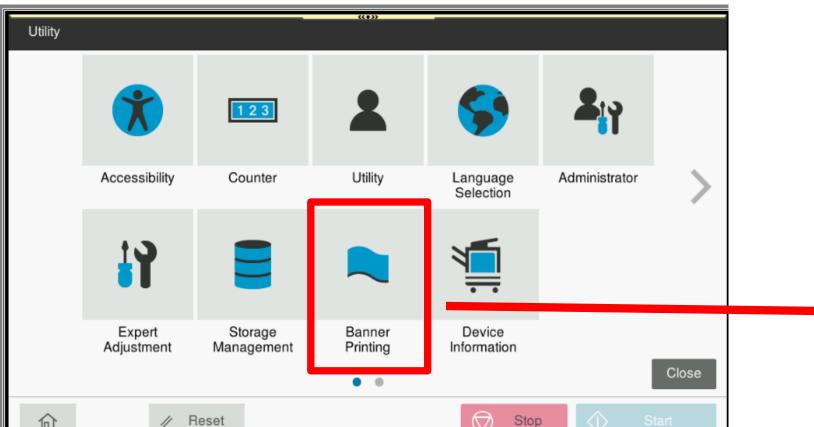

3

The Settings in the print driver need to be customized to the size of your paper (once you select the down arrow under ORIGINAL SIZE scroll to the bottom to create a custom size). The maximum is 11.5" x 47".




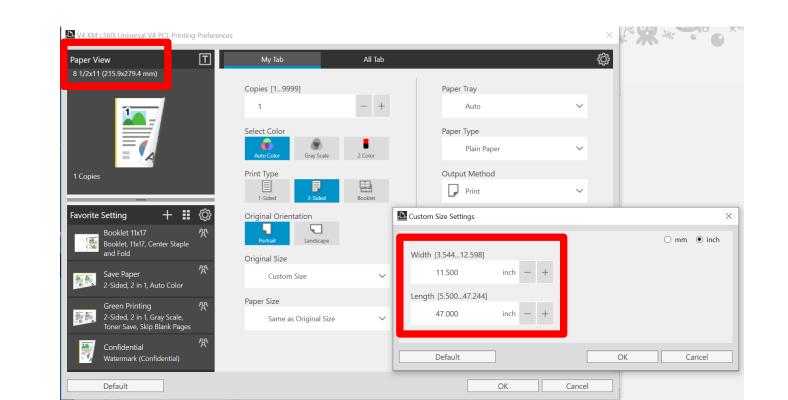





When the job is complete, Banner Printing needs to be set at Restrict (ie. select "Exit" on the device screen) so normal printing can resume.

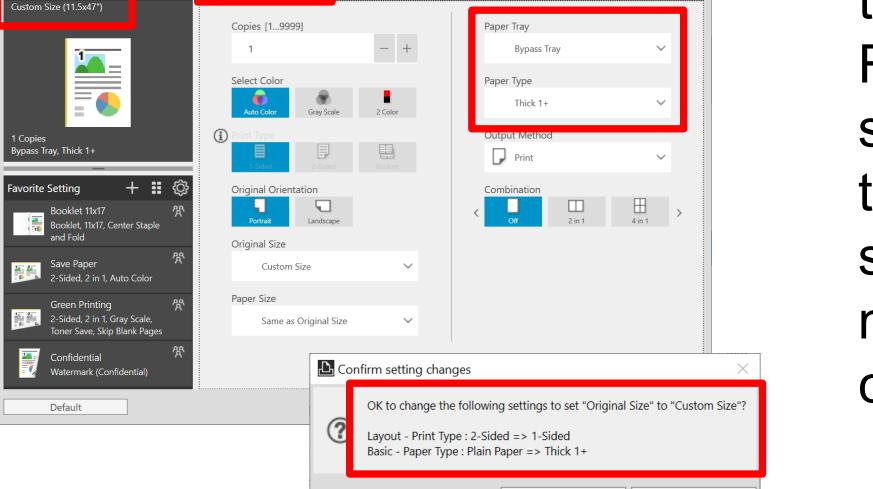

OK